


UNDER DRAWER ASSEMBLY INSTRUCTIONS

IMPORTANT: Two flat bed rails must be installed on the bed. The flat portion runs parallel to the ground allowing room for the drawers to open and close.

STEP 1: Pull the drawer out and attach the two sections together by screwing from behind into the trim piece.


(This step is optional. The weight of the mattress will keep the sections together.)

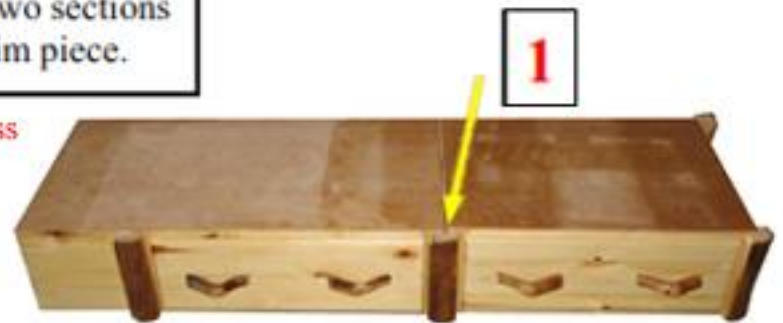

STEP 2: Attach the side trim through the pre-drilled holes. The trim pieces are found in one of the drawers.



STEP 3: Also found in the drawers are 2 "T" supports. Place one in the middle to serve as the center support, and one at the head.

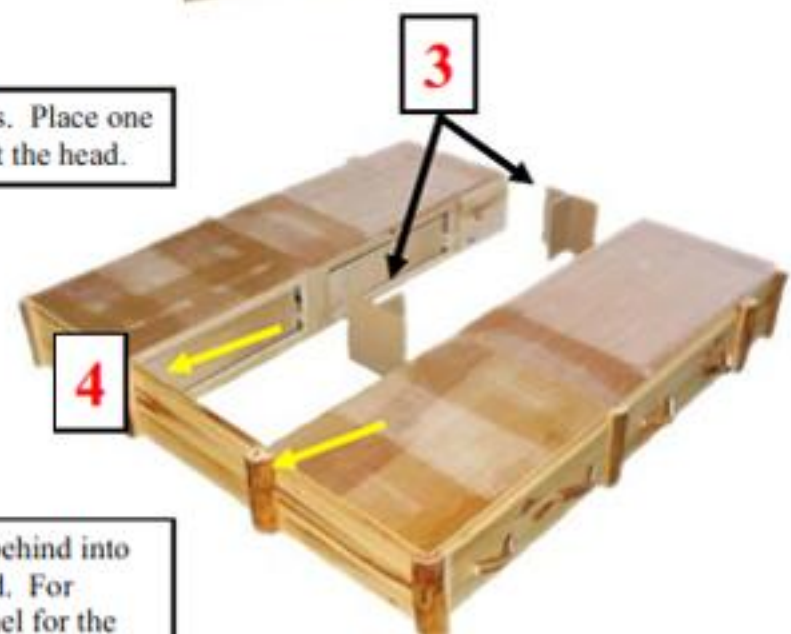

STEP 4: Attach the privacy panel by screwing from behind into the trim pieces. The panel comes to fit a king size bed. For queen and other smaller sizes measure and cut the panel for the desired fit. The Privacy Panel is found in one of the drawers.